USER'S MANUAL
BULLPUP SHOTGUN

READ THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL CAREFULLY BEFORE USING THIS FIREARM

SOVRAN ARMS

www.sovranarms.com

SOVRAN USA

"Leader Redefined"

ww.sovranarmsUSA.com

FIREARM OWNER'S RECORD

MODEL _____ SERIAL# _____ DATEPURCHASED, ___ ___ _____

IMPORTANT WARNING ..... INFORMATION AND SPECIFICATIONS CONTAINED IN THIS MANUAL MAY CHANGE WITHOUT NOTIFICATION

CARE AND MAINTENANCE OF YOUR SOVRAN ARMS SHOTGUN

1) NEVER ALTER OR MODIFY YOUR SHOTGUN This shotgun was produced under specific manufacturer guidelines and should not be changed under ANY circumstances. Altering the trigger, mechanical components, safety mechanisms, or using any other products other those provided in the original box is NOT RECOMMENDED by the manufacturer, and could result death, bodily harm, or compromising your safety or the safety of others. Any alteration made to the firearm also voids the factory warranty.

2) PROPER CARE AND MAINTENANCE It is essential that regular maintenance and cleaning be performed to maintain the accuracy, function, and maximize the longevity of your firearm. Before cleaning ALWAYS perform a safety check to make sure that the firearm is unloaded prior to cleaning.

CONGRATULATIONS!!!!!

You are now the owner of the SOVRAN ARMS shotgun. Your shotgun has an innovative design and is manufactured from high quality materials. With regularly performed maintenance and the use of proper ammunition it will provide you with many years of service.

In order to achieve the best performance and reliability from your shotgun, please read and fully understand all of the instructions, safety guidelines, and warnings carefully in this manual. Your quality shotgun is enormously reliable and safe unless it is handled in a careless or irresponsible manner. REMEMBER.... IT IS IMPERATIVE THAT THE FIREARM HANDLER BE FULLY EDUCATED AND CONSCIOUS OF THE IMPORTANCE OF EXECUTING PROPER GUN SAFETY RULES WHEN OPERATING ANY FIREARM.

Before using or firing with any live ammunition you should know and fully understand your shotgun's parts, function, and operating mechanisms. So carefully read and fully understand all of the information about the parts and procedures of using the shotgun safely and e□ ectively.

A GUN OWNER'S RESPONSIBILITY

The U.S. constitution has granted you the right and honor to own a firearm. Treat this privilege with care and respect.
As the owner of a firearm you have the responsibility and obligation of ensuring that any and all shooting activities are safe for everyone. This requires your personal commitment to carefully read, fully understand, and exercise the principles of proper firearm safety at all times.

DISCLAIMER

THE FIREARM IN WHICH THESE SAFETY RULES APPLY IS SOLD UNDER THE EXPRESSED CONDITIONS THAT THE MANUFACTURER ACCEPTS NO LIABILITY IN PART OR WHOLE FOR BODILY INJURY, DEATH, OR PROPERTY DAMAGE FROM:

- IMPROPERLY OR CARELESSLY HANDLING THE FIREARM.
- USING DEFECTIVE, IMPROPER CALIBER, HAND-LOADED, OR RELOADED AMMUNITION.
- INADEQUATE MAINTENANCE OF THE SHOTGUN RESULTING IN CORROSION OR DAMAGE,
- NEGLIGENCE OF MALFUNCTIONS.
- RESALE IN CONTRADICTION OF ANY APPLICABLE LAWS OR REGULATIONS,
- ALTERING OR CONVERTING THE FIREARM'S ORIGINAL AESTHETIC, FUNCTIONING
- MECHANISMS, ACCESSORIES, OR MECHANICAL CONFIGURATION, DISCHARGING WITH CRIMINAL INTENT OR NEGLIGENCE.
- FAILURE TO UNDERSTAND, ADHERE TO, AND FOLLOW THE RULES OF FIREARM SAFETY WHEN USING OR HANDLING THE FIREARM.
- OR ANY OTHER CIRCUMSTANCES OUTSIDE THE MANUFACTURER'S DIRECT OR IMMEDIATE CONTROL.

FIREARM SAFETY

IMPORTANT WARNING: IT IS IMPORTANT FOR YOU TO RECEIVE PROPER TRAINING FROM A COMPETENT FIREARMS INSTRUCTOR OR AUTHORITY BEFORE BEGINNING TO SHOOT OR WHEN HANDLING THE FIREARM.

IMPORTANT WARNING: FAILURE TO ADHERE TO THE RULES OF FIREARM SAFETY CAN RESULT IN SERIOUS INJURY, DEATH, OR DESTRUCTION OF PROPERTY.

1) COMPLETELY READ AND UNDERSTAND YOUR OWNER'S MANUAL GUIDELINES BEFORE USINGYOUR FIREARM. You should fully understand the function of all of the components and mechanics of the firearm.

Before you remove the firearm out of the box thoroughly read the owner's manual on how to properly carry, handle, load, unload, and store your new firearm. Know the rules of proper gun safety and exercise them at all times because failure to do so may result in death or injury to yourself or others. Because it is impossible to list every firearm situation or scenario, be aware that certain circumstances may require additional safety rules unique to a particular situation. In these cases, we recommend that you use

2) ALWAYS LEARN THE SPECIFIC MECHANICAL AND HANDLING CHARACTERISTICS OF YOURSHOTGUN. All firearms are di□erent thus it is important for you to understand how to properly carry, use, and handle each one according to its specific guidelines. Before using any firearm, one must completely familiarize themselves with the type of firearm and its specific safe handling procedures for loading, unloading, carrying.

NEVER

Give the shotgun to any person who has not thoroughly familiarized himself or herself with allof the information, safety rules, and warnings in the owner's manual.

3) ALWAYS KEEP THE FIREARM UNLOADED UNTIL READY TO USE. Firearms should be kept unloaded when not in use. Whenever your pick up a firearm, immediately engage the safety device and remove the magazine to visually inspect the chamber and confirm that it is clear. Always unload all ammunition from the chamber and remove the magazine after: 1) shooting, 2) before putting the firearm away, 3) putting it into a holster, 4) when not in use, and 5) when handing it over to another person.

NEWER

- Leave a loaded gun unattended, propped up against a surface, or out of your hands.
- Assume a firearm is unloaded, even if you used it last. Always check to make sure that there is no ammunition and the chamber is clear.
- Load a cartridge into the chamber until you are ready to fire.
- Carry or transport your firearm with live ammunition in the chamber.
- Pass a firearm to another person or accept a firearm from another person, until the cylinder or action is open and you have personally checked that the weapon is completely unloaded.
- Haul a loaded firearm openly or in a carrying case.
- Never transfer or hand a loaded firearm to someone else.

4) ALWAYS KEEP YOUR FINGER OFF THE TRIGGER UNTIL YOU ARE READY TO SHOOT. When holding the firearm be sure to rest your finger on the trigger guard and along the side of the gun.

NEWER

- Touch the trigger until you are ready to fire.
- Engage in horseplay while handling a firearm.
- Rely on the safety devices of the gun. Mechanical safeties are never foolproof and can wear out and malfunction overtime. Remember to always handle all firearms using proper gun safety guidelines.

5) ALWAYS KEEP THE GUN POINTED IN A SAFE DIRECTION. A safe direction is one in which an accidental discharge cannot or would not cause injury or harm to yourself or others. Use extreme caution especially when loading and unloading your firearm.
When handling any firearm always treat it as if it was loaded and ready to fire, even if you think it is empty. The recommended carrying position of your shotgun is with the hammer in de-cocked position.

NEWER

- Point your firearm at anything you don't intend to shoot.
- Use a firearm under the influence of alcohol, drugs, or any other substances that may impair your judgment, skills, or physical abilities.
- Target shoot or hunt with a firearm when you are fatigued or too tired to operate the firearm safely.
- Use your firearm if you have an illness or disability that could compromise your judgment and the safety of yourself or others.

6) ALWAYS USE THE CORRECT AMMUNITION. All firearms are manufactured to use a certain caliber or gauge of ammunition. Only use ammunition that the manufacturer has recommended. Always verify before loading that you have the correct ammunition that matches the manufacturer's recommendations. Using improperly reloaded or incorrect ammunition can cause death and injury. This can also damage or destroy your firearm which will void any warranty.

NEWER

- Shoot the gun unless you know you have the proper ammunition.
- Use hand loaded, non-standard or reloaded ammunition.
- Fire ammunition that exceeds industry standard pressure specifications.
- Use old, soiled, or damaged ammunition.
- Use ammunition which does not feed reliably in your particular firearm as it may malfunction at a critical juncture.

7) ALWAYS STORE YOUR FIREARM IN A SECURED STORAGE AREA TO PREVENT UNAUTHORIZED ACCESS OR USE FROM OTHER INDIVIDUALS. There are many types of firearm storage devices as well as locking devices that attach directly to the firearm itself. Each individual must consider their particular circumstances so that the firearm is stored and maintained for optimal safety and security. Metal gun safes are recommended over open racks or glass front cabinets. Mechanical safeties built into the firearm can fail and should not be used as a substitute for safe gun handling and adherence to all firearm safety rules. Additionally, always store your ammunition locked up and secured separately from any firearms.

NEWER

- Store or hide a loaded firearm.
- Leave your firearms where unauthorized access from other individuals can occur.
- Allow access to individuals who are do not understand or follow the rules of proper gun safety.
- Leave a unsecured firearm in a bed, drawer, closet, or any other vehicle that could allow access to children or other unauthorized individuals.
- Allow children under the age of 18 access to any firearms without close supervision and proper firearm safety training.

8) ALWAYS COMPLY WITH ALL LOCAL. STATE, AND FEDERAL LAWS THAT GOVERN THE OWNERSHIP, STORAGE, CARRYING, AND USE OF FIREARMS.

NEWER

- Vandalize any public or private property by using it as a target.
- Poach a game animal out of season.
- Kill any animal you don't intend to eat.

9) ALWAYS KNOW YOUR TARGET AND WHAT IS BEYOND. Before you pull the trigger be sure of your target and what is behind it. Shoot only in areas that have approved backdrops such as a shooting range, or backstops such as a hillside or berm. Also, know how far your shot will travel in case you miss the target or the bullet ricochets.

NEWER

- Fire in the direction in which there are people.
- Fire at a sound, movement, or a flash of color.
- Shoot directly upwards or at a high angle of elevation. Firing at or into the air can have enough energy to travel long distances and accidently injure or kill someone.
- Shoot across a highway or other roadway.

10) ALWAYS WEAR EYE/ EAR/BODY PROTECTION. Gases and debris can cause injury so it is very important that one wears protective gear to preserve their hearing and eyesight. Also, while in the field wear at least 1000 square inches or more of blaze orange so that you can be visible by others.

NEWER

- Discharge a firearm in a poorly ventilated area.

IMPORTANT WARNING : POSSIBLE LEAD EXPOSURE CAN OCCUR WHEN DISCHARGING FIREARMS IN A POORLY VENTILATED AREA, CLEANING THE FIREARM, OR HANDLING AMMUNITION. LEAD AND ITS COMPONENTS IS A SUBSTANCE KNOWN TO CAUSE BIRTH DEFECTS, REPRODUCTIVE DESTRUCTION/IMPAIRMENT, CANCER, OR OTHER SERIOUS HEALTH CONDITIONS AND INJURY. ALWAYS HAVE ADEQUATE VENTILATION AT ALL TIMES AND WASH YOUR HANDS AND OTHER CONTACT AREAS THOROUGHLY AFTER EACH EXPOSURE.

11) ALWAYS HANDLE WITH EXTREME CARE IF YOUR GUN FAILS TO FIRE WHEN THE TRIGGER IS PULLED. If the ammunition doesn't fire when you pull the trigger, STOP! and remember to always keep the firearm pointed in a safe direction. Keep your face away from the breech, then put the safety on, carefully open the action, unload the firearm and dispose of the cartridge safely. Always keep in mind that anytime there is a shell in the chamber, your firearm is LOADED and ready to fire. Even if you tried to shoot and the firearm did not fire, always treat it as if it could still discharge.

12) ALWAYS TREAT THE FIREARM AS IF IT WAS LOADED, EVEN IF THE SAFETY IS POSITIONED CORRECTLY AND KEEP YOUR FINGERS AWAY FROM THE TRIGGER WHEN LOADING AND UNLOADING. A gun is a mechanical device and is not foolproof and is subject to wear and tear over time. Always keep your fingers away from the trigger when you are loading and unloading. If the manual safety proves to be ine□ective for any reason, danger of an unintentional discharge exists, the weapon is then must be immediately unloaded and

restricted from further use. Contact SOVRAN ARMS Arms. Importer so that the gun can be inspected and repaired by an authorized gunsmith. REMEMBER..THAT ANY FIREARM SAFETY MECHANISMS CAN FAIL, EVEN IF THE SAFETY IS ENGAGED. YOU SHOULD ALWAYS ASSUME THAT A FIREARM IS LOADED WHEN HANDLING IT.

13) ALWAYS KEEP YOUR SHOTGUN IN THE SAME MECHANICAL AND STRUCTURAL CONFIGURATION AS IT WAS WHEN IT WAS MANUFACTURED. This shotgun was produced under specific manufacturer guidelines and should not be altered or changed under ANY circumstances. Performing conversions by altering the trigger, mechanical components, safety mechanisms, or using any other products other those provided in the original box is NOT RECOMMENDED by the manufacturer, and could result death, bodily harm, or compromising your safety or the safety of others. Any alteration made to the firearm also voids the factory warranty. Like any mechanical device it is subject to normal wear and tear from use. In order to maintain optimal safety and performance it should be periodically serviced. You must regularly clean and lubricate your firearm to maintain its functionality, accuracy, safety, and reliability. Always before cleaning or lubricating any firearm make sure that you perform a safety check to make sure that the firearm is completely unloaded prior to performing any routine maintenance. If for some reason your firearm does require repairing, you must contact the U. S. importer for an approved service provider. Using unauthorized personnel to repair your firearm will void your manufacturer's warranty.

NEWER

- Alter, convert, or change your firearm from its original manufacturer's configuration.

IMPORTANT WARNING : THIS FIREARM WAS DESIGNED TO FUNCTION PROPERLY IN ITS ORIGINAL CONDITION. THE MANUFACTURER WILL NOT BE HELD LIABLE OR LEGALLY RESPONSIBLE FOR ANY ALTERATION PERFORMED ON THE FIREARM AFTER IT LEAVES THEIR CONTROL. THIS INCLUDES ANY ADDITION OR SUBSTITUTION OF PARTS OR ACCESSORIES THAT ARE NOT MANUFACTURED BY SOVRAN ARMS ARMS ANY CHANGES MADE TO THE FIREARM IS SPECIFICALLY CONTRARY TO OUR INSTRUCTIONS AND WE EXPRESSLY DO NOT AUTHORIZE ANY CHANGES BE MADE AFTER MANUFACTURE.DO NOT JEOPARDIZE THE SAFETY OF YOURSELF OR OTHERS BY MAKING MODIFICATIONS TO YOUR FIREARM.

14) ALWAYS MAKE SURE THE BARREL IS CLEAR OF ANY OBSTRUCTIONS BEFORE SHOOTING. Before loading always perform a safety check to make sure that there is no ammunition in the chamber or magazine. Examine the barrel for any obstructions or debris such as excess lubricant, dirt, or grease. If the bore is obstructed it can cause increased pressure causing the barrel to bulge or burst during use. Always use a cleaning rod and patch to remove any residues or obstructions in the barrel. Be familiar with your firearm. If the noise or recoil seems mu□ ed or weak then STOP! And proceed to unload your firearm and check to make sure nothing is lodged in the barrel.

NEWER

- Try to shoot out an obstruction by loading another shell and firing.

SERIAL NUMBER OF THE FIREARM

The serial number is located on various parts of the shotgun. Each serial number is specific to that shotgun and is used for identification and registration. It is recommended that you record your serial number in your manual and keep the information in a secured location.

LOADING THE SHOTGUN

1) First, point the shotgun in a safe direction. Remember, a safe direction means that the gun is pointed so that even if it were to go o□, it would not cause injury, damage, or death. Always perform a safety check to make sure that the chamber is empty.

2) When the magazine is empty, the bolt catch lever holds the bolt open at the rear. Press the magazine release to remove the empty magazine and insert a loaded magazine. Remember to only use ammunition that is recommended by the manufacturer.

3) Push down the bolt catch lever with the thumb of the shooting hand and this will allow the bolt to move forward and chamber a round.

THE SHOTGUN IS NOW LOADED AND READY TO FIRE!

IMPORTANT WARNING: ALWAYS UNLOAD YOUR FIREARM IMMEDIATELY AFTER SHOOTING


UNLOADING THE SHOTGUN

1. Point the shotgun in a safe direction. Remember, a safe direction means that the gun is pointed so that even if it were to go o□, it would not cause injury, damage, or death.

2. Keep your fingers o□ the trigger and remove the magazine.

3. Pull back the charging handle one or more times to insure the chamber is empty. Watch for a live round or empty case to be ejected. Pull the charging handle fully rearward and lock the bolt with the bolt catch lever.

4. Make sure the last round in the chamber has been extracted and ejected. Visually and physically check the chamber and the magazine well to make sure the shotgun has been fully unloaded. Perform a safety check by physically inserting your index finger in the chamber to feel for the presence of a round or cartridge case in the chamber.

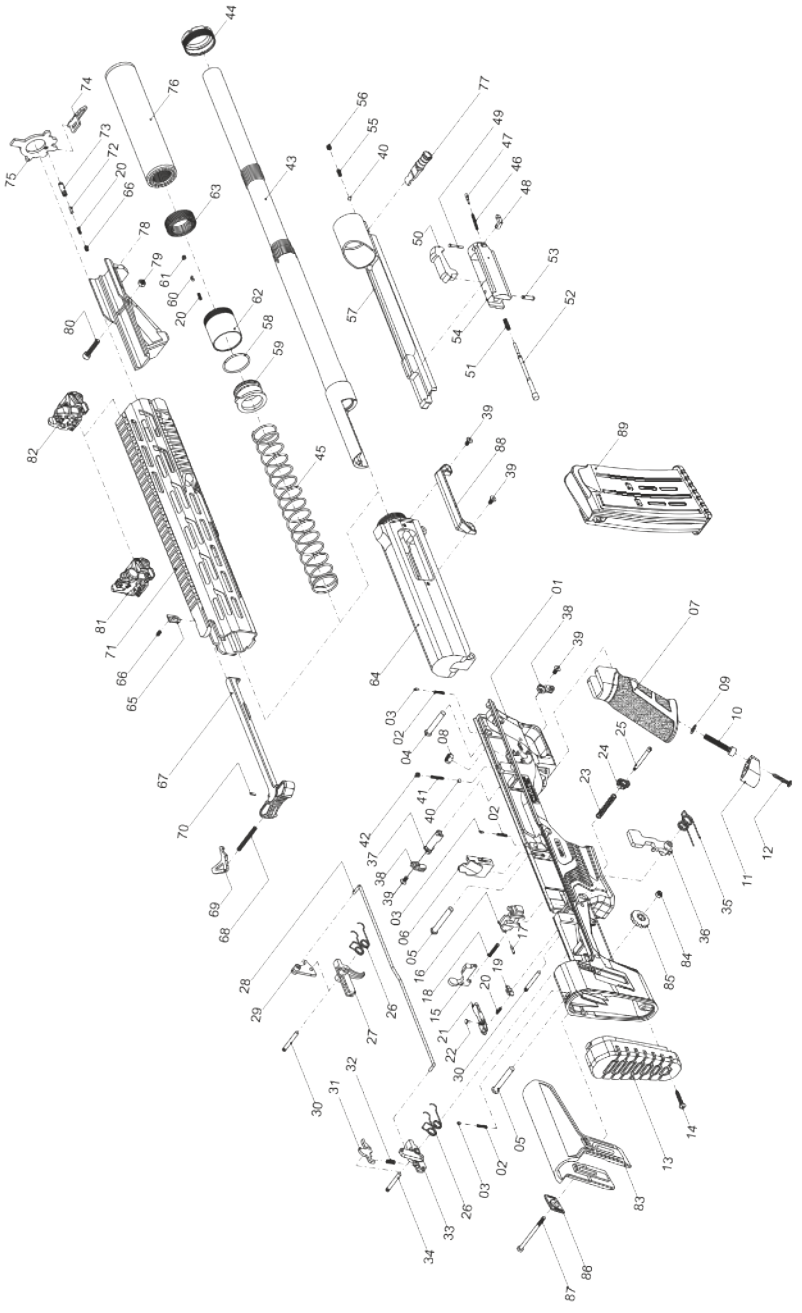


PART LIST

1 Lower Receiver
2 Pivot Pin Spring (3 pieces)
3 Pivot Pin Detent (3 pieces)
4 Handguard Pivot Pin
5 Upper Receiver Pivot Pin (2 pieces)
6 Cartridge Carrier
7 Pistol Grip
8 Pistol Grip Assembly Nut(M6 Fiber Nut)
9 Pistol Grip Lock Washer
10 Pistol Grip Screw (M6x35)
11 Pistol Grip Cover
12 Pistol Grip Cover Screw
13 Recoil Pad
14 Recoil Pad Screw
15 Bolt Catch
16 Bolt Catch Body
17 Bolt Catch Pin
18 Bolt Catch Spring
19 Magazine Catch Base
20 Magazine CatchGas Block Muzzle Brake Spring (3 pieces)"
21 Magazine Catch
22 Magazine Catch Pin
23 Magazine Plug Spring
24 Magazine Plug
25 Magazine Plug Screw
26 Trigger-Sear Spring (2 pieces)
27 Trigger
28 Trigger Catch Shaft
29 Trigger Catch
30 Trigger-Hammer Assembly Pin(2 pieces)
31 Disconnector
32 Disconnector Spring
33 Sear
34 Sear Assembly Pin
35 Hammer Spring
36 Hammer
37 Safety
38 Safety Selector (2 pieces)
39 Safety Selector Screw(M4xHB Screw 4 pieces)
40 Safety Charging Handle (2 pieces)
41 Safety
42 Safety Spring Screw
43 Barrel
44 Barrel Assembly Nut
45 Recoil Spring
46 Extractor Pin
47 Extractor Spring Pin
48 Extractor
49 Extractor Retaining Pin
50 Locking Block
51 Firing Pin Spring
52 Firing Pin
53 Firing Pin Stop
54 Bolt
55 Charging Handle Bearing Spring
56 Charging Handle Bearing Screw
57 Bolt Handle
58 Piston Ring
59 Piston
60 Gas Block Adjust Pin
61 Gas Block Adjust Pin Screw
62 Gas Block
63 Gas Block Adjust Screw
64 Upper Receiver
65 Handguard Wedge
66 M4x6 Set Screw(2 pieces)
67 Upper Charging Handle
68 Charging Handle Latch Spring
69 Charging Handle Latch
70 Charging Handle Latch Pin
71 Handguard
72 Muzzle Brake Retaining Pin
73 Muzzle Brake Retaining Pin Base
74 Sling Swivel
75 Handguard Centering Cap
76 Muzzle Brake
77 Charging Handle
78 Forend Grip
79 M5 Nut
80 M5x25 Screw Nut
81 Line of Sight
82 Bead Front Sight
83 Cheek Piece
84 M4 Fiber Nut
85 Cheek Piece Setting Plug
86 Cheek Piece Setting Plug Nut
87 M4x55 Screw
88 Bolt Shield
89 Magazine


SOVRAN ARMS SHOTGUN DISASSEMBLY INSTRUCTIONS

MANUFACTURERS WARNING: THIS MANUFACTURED FIREARM WAS DESIGNED TO PERFORM WITH ITS ORIGINAL PARTS. IT IS YOUR RESPONSIBILITY TO MAKE SURE THAT ANY PARTS YOU BUY ARE AUTHENIC AND CORRECTLY INSTALLED AND THAT THE PARTS HAVE NOT BEEN ALTERED OR CHANGED. IT IS IMPERATIVE THAT ONLY FACTORY PARTS BE USED AS REPLACEMENTS TO ASSURE THAT THE FIREARM REMAINS FUNCTIONALLY SAFE AND OPERATES ACCURATELY. THE GUN OWNER ACCEPTS FULL RESPONSIBILITY FOR THE CORRECT REASSEMBLY AND FUNCTIONING OF THE FIREARM AFTER ANY DISASSEMBLY OR REPLACEMENT OF PARTS.

IMPORTANT WARNING: BEFORE YOU BEGIN ANY DISASSEMBLY ALWAYS 1) POINT THE SHOTGUN IN A SAFE DIRECTION 2) BE SURE THAT YOU REMOVE THE MAGAZINE FROM THE FIREARM 3) VISUALLY AND MANUALLY INSPECT THE CHAMBER TO CONFIRM THAT IT IS EMPTY.

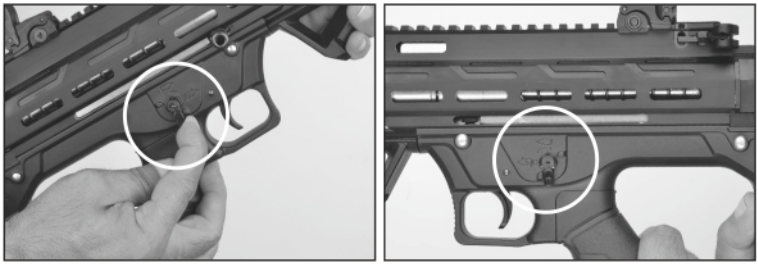

1) Use the Safety Selector to put the gun into safe mode. There are two Safety Selectors, one on the right and one on the left. Before this operation, make sure the gun is unloaded and point the firearm in a safe direction.

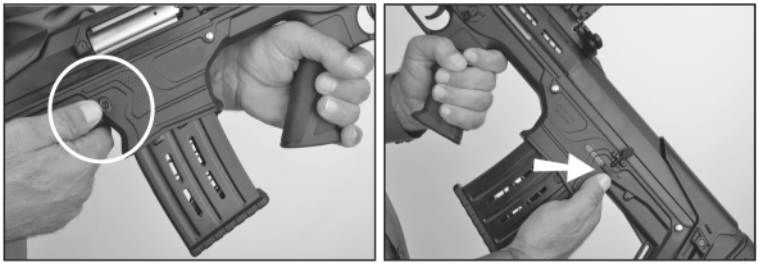

2) Use the Magazine Plug on the right side of the firearm or use the Magazine Catch on the left side of the firearm to take out the Magazine.



3) Take out the Muzzle Brake by turning counterclockwise



4) Take out the Charging Handle.



5) Take out the Cheek Piece Setting Plug and Cheek Piece Setting Plug Nut.



6) Pull the Upper Receiver Pivot Pins and Handguard Pivot Pin to take out.




7) Separate the Upper Receiver from the Lower Receiver.



8) Take out the Handguard.



9) Take out the Gas Block Adjust Screw by turning counterclockwise and take out the Gas Block by turning clockwise.

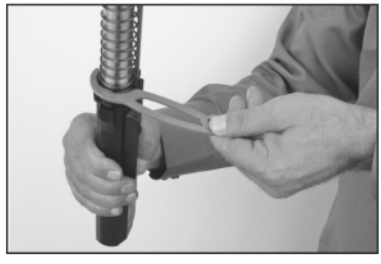

10) Take out the Barrel Assembly Nut by turning counterclockwise.



11) Separate the Barrel from the Upper Receiver.

CHOKE SET

THE SOVRAN ARMS SHOTGUN COMES WITH 3 SCREW-IN INTERNAL CHOKES (FULL, MODIFIED AND CYLINDER BORE). EACH CHOKE CAN BE IDENIFIED BY THE NUMBER OF NOTCHES ON IT (FULL-1 NOTCH, MODIFIED-3 NOTCHES, AND CYLINDER BORE-5 NOTCHES). A CHOKE WRENCH IS SUPPLIED IN THE BOX WITH THE CHOKES. BEFORE YOU ATTEMPT TO INSTALL A CHOKE ALWAYS PERFORM A SAFETY CHECK TO MAKE SURE THAT THE SHOTGUN IS UNLOADED AND POINTED IN A SAFE DIRECTION. TO INSTALL THE CHOKE YOU CAN INSERT IT INTO THE END OF THE BARRELAND HAND SCREW IT. IT CAN THEN BE TIGHTENED WITH THE CHOKE WRENCH TO SECURE IT IN PLACE.

SCREW-IN CHOKE WARNING

NEVER PEER DIRECTLY INTO THE SHOTGUN'S MUZZLE OR CHANGE CHOKES WHEN THE GUN IS LOADED REGARDLESS OF THE POSITION OF THE SAFETY. NEVER FIRE THE SHOTGUN IF THE SCREW-IN CHOKE IS NOT FULLY AND TIGHTLY BOTTOMED TO THE BARREL THREADS, OR IMPROPERLY INSTALLED OR "CROSS-THREADED, OR IF THE THREADS OF THE BARREL OR CHOKE INSERT IS DAMAGED. IN THIS SITUATION THE BARREL WILL BE DAMAGED AND THE CHOKE INSERT WILL BE PROPELLED OUT OF THE MUZZLE WITH HIGH VELOCITY WHICH CAN RESULT IN DEATH, SERIOUS INJURY, OR PROPERTY DAMAGE. NEVER FIRE THE SHOTGUN WITHOUT THE SCREW-IN CHOKE IN PLACE AS IT WILL CAUSE AN UNPREDICTABLE SHOT PATTERN AND DAMAGE THE CHOKE THREADS IN THE BARREL THUS MAKING CORRECT INSTALLATION OF THE SCREW-IN CHOKE IMPOSSIBLE WITHOUT EXPENSIVE RE-BARRELLING.

IMPORTANT WARNING: BEFORE YOU START CLEANING YOUR SHOTGUN ALWAYS MAKE SURE IT IS UNLOADED AND POINTED IN A SAFE DIRECTION.

LUBRICATION WARNING: FIRING A SHOTGUN WITH OIL, GREASE, OR OTHER DEBRIS PARTIALLY OBSTRUCTING THE BORE MAY RESULT IN DAMAGE TO THE FIREARM OR INJURY TO THE SHOOTER AND THOSE NEARBY BEFORE FIRING MAKE SURE THE BORE AND CHAMBER OF THE BARREL IS UNOBSTRUCTED AND DRY NEVER SPRAY OR APPLY LUBRICANT ON SHOTSHELLS. FIRING ANOTHER SHOTSHELL BEHIND AN OBSTRUCTION MAY DAMAGE THE SHOTGUN AND CAUSE DEATH OR INJURY. ONLY USE LUBRICANTS PROPERLY AND SPARINGLY. YOU ARE RESPONSIBLE FOR THE PROPER CARE AND MAINTENANCE OF YOUR SHOTGUN.

SOVRAN ARMS

SOVRAN USA
"Leader Redefined"

Head Office:

www.sovranarms.com
info@sovranarms.com
Yeni Mah. 41307 Sok. No: 3A
Beysehir, Konya, Turkiye

Sovran Arms USA
(For inquries within the USA)
www.sovranarmsUSA.com
info@sovranarmsUSA.com
118 South Main Street
Elmwood WI, 54740